




# NTN Freeride mounting jig (A3)



IN ORDER TO GET THE MAXIMUM USE OUT OF MODERN SKI, THE BINDING SHOULD BE MOUNTED ACCORDING TO THE SKI MANUFACTURERS INSTRUCTION ON SKI CENTER MARK.

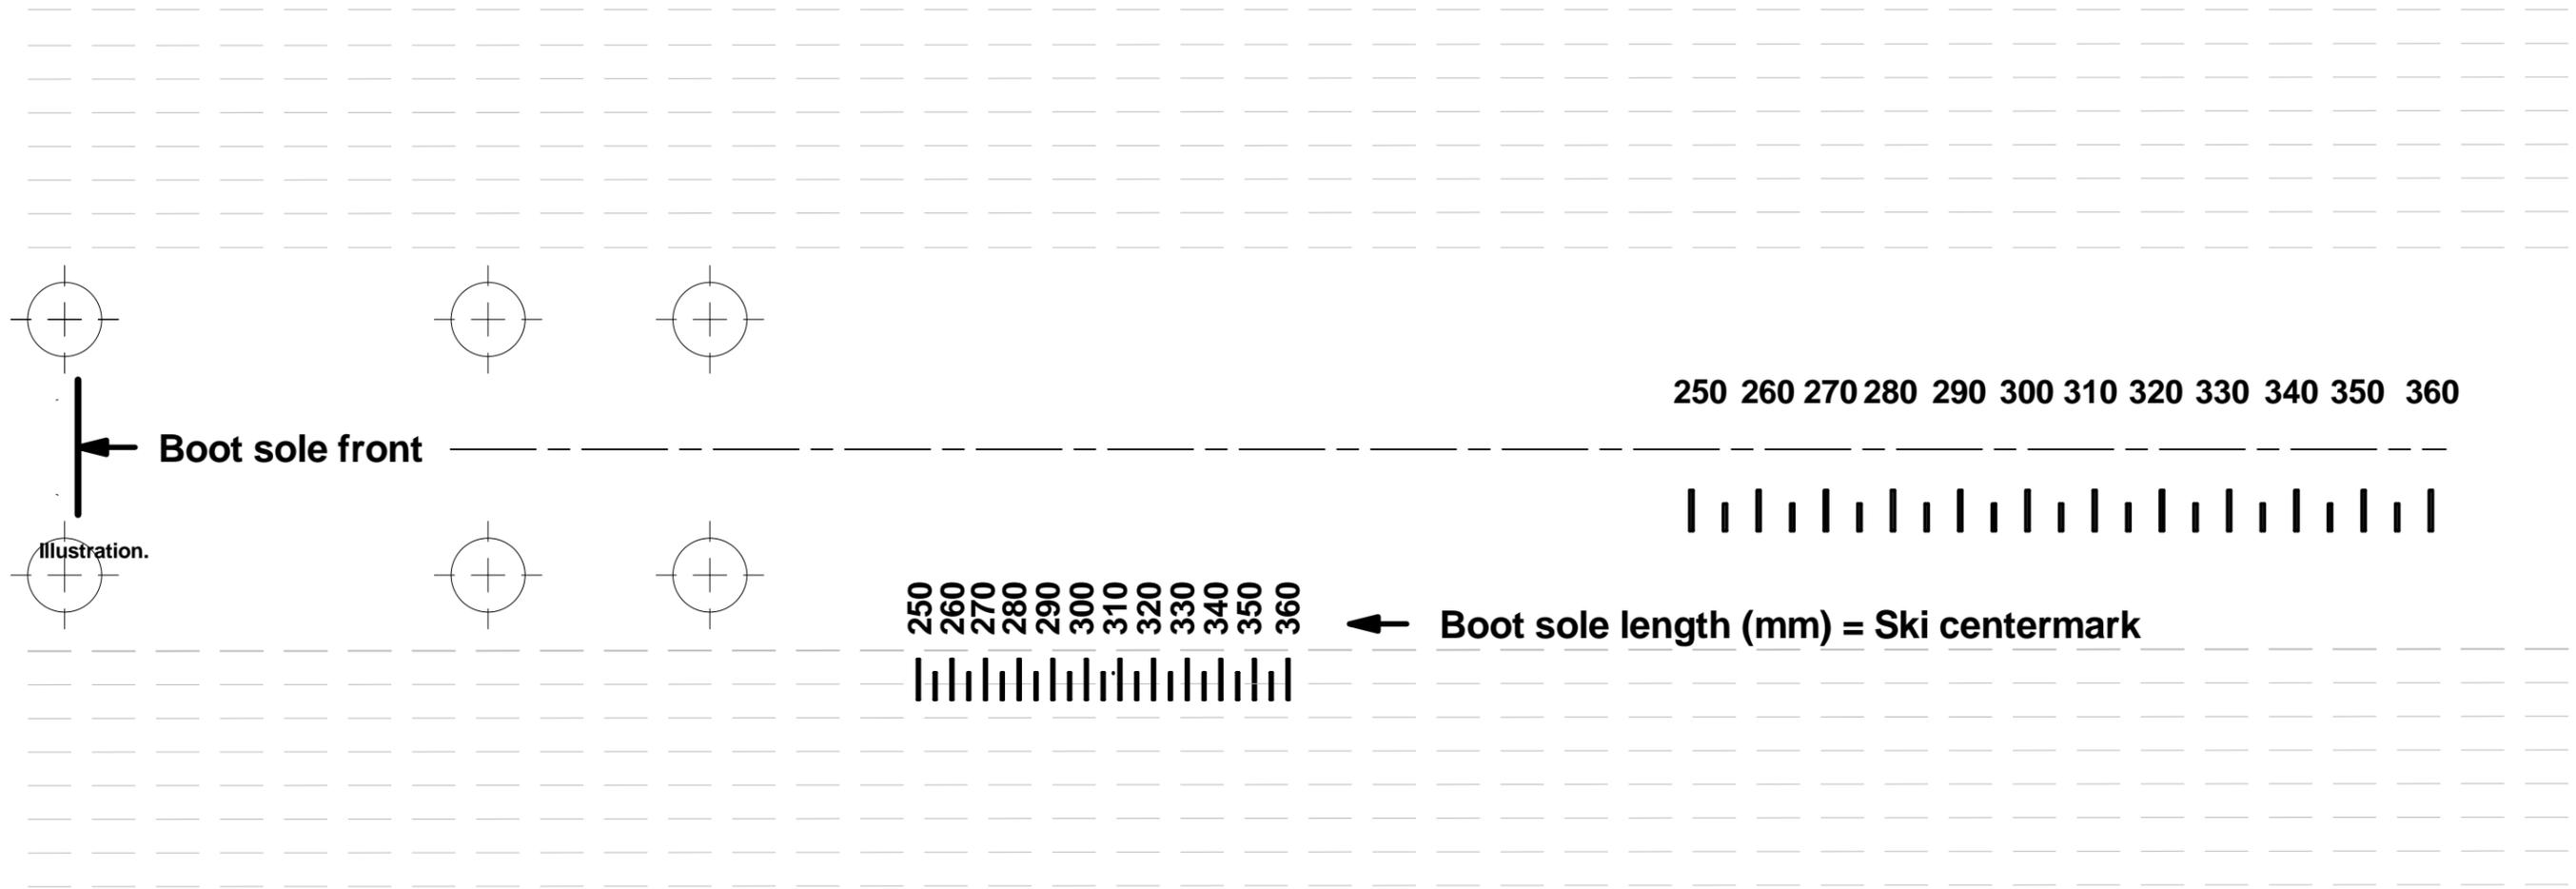



## NTN Freeride mounting jig (A3)

1. Line A on page 1 and 2 placed over each other and taped together. Cut off heel and "window" to the heel (selected clips), place the part 2 over right side of part 1 (see illustration 1).
2. Place the boot on top of the template. The tip and the heel should match the lines on the template (labeled tip of the boots/ heel of the boots).
3. Attach with tape part 2 on part 1 in this position (remember to place everything in center).
4. Read the number value in the "window" on the heel part (Boot sole length)
5. The template is placed on the ski so that the center mark on the ski matches the read value (point 4) on the orangenumber scale. Remember to center the template on the ski.
6. Drill the hole (3.6 x9 mm drill) to the binding plate and the heel, remove the template and mount the binding according to mounting instructions.
7. Repeat point 5 and 6 on the next ski.

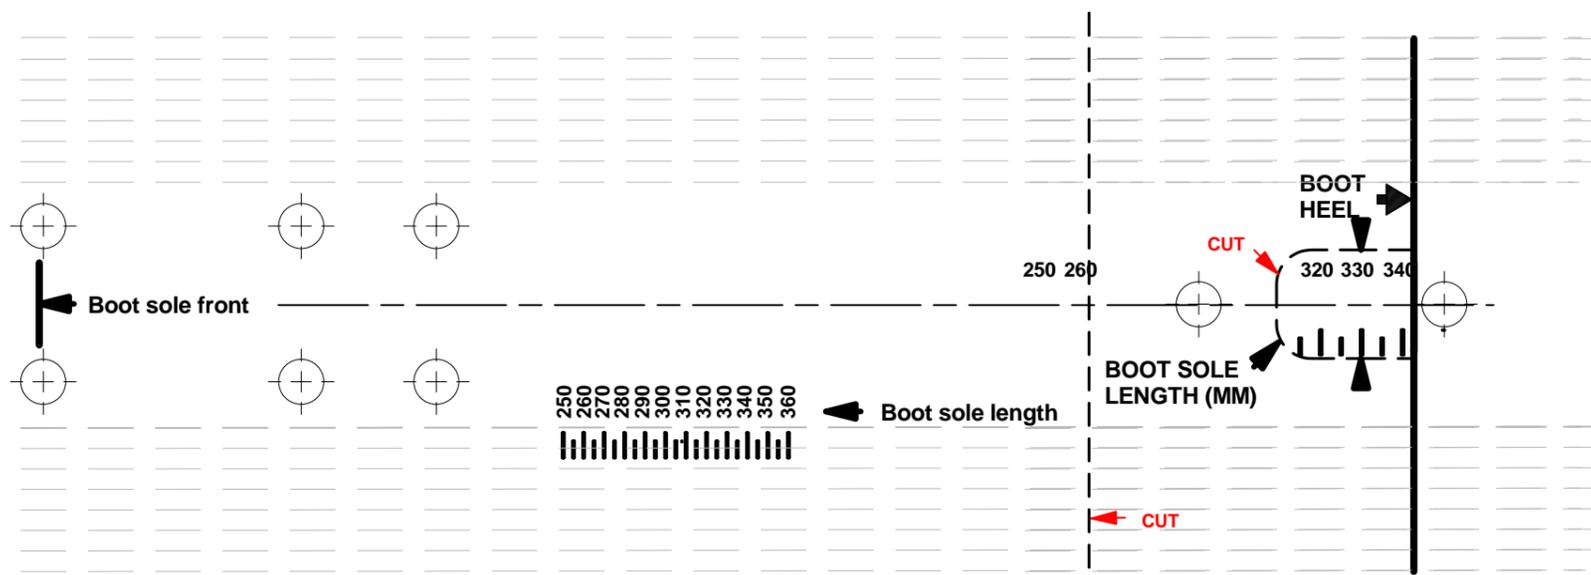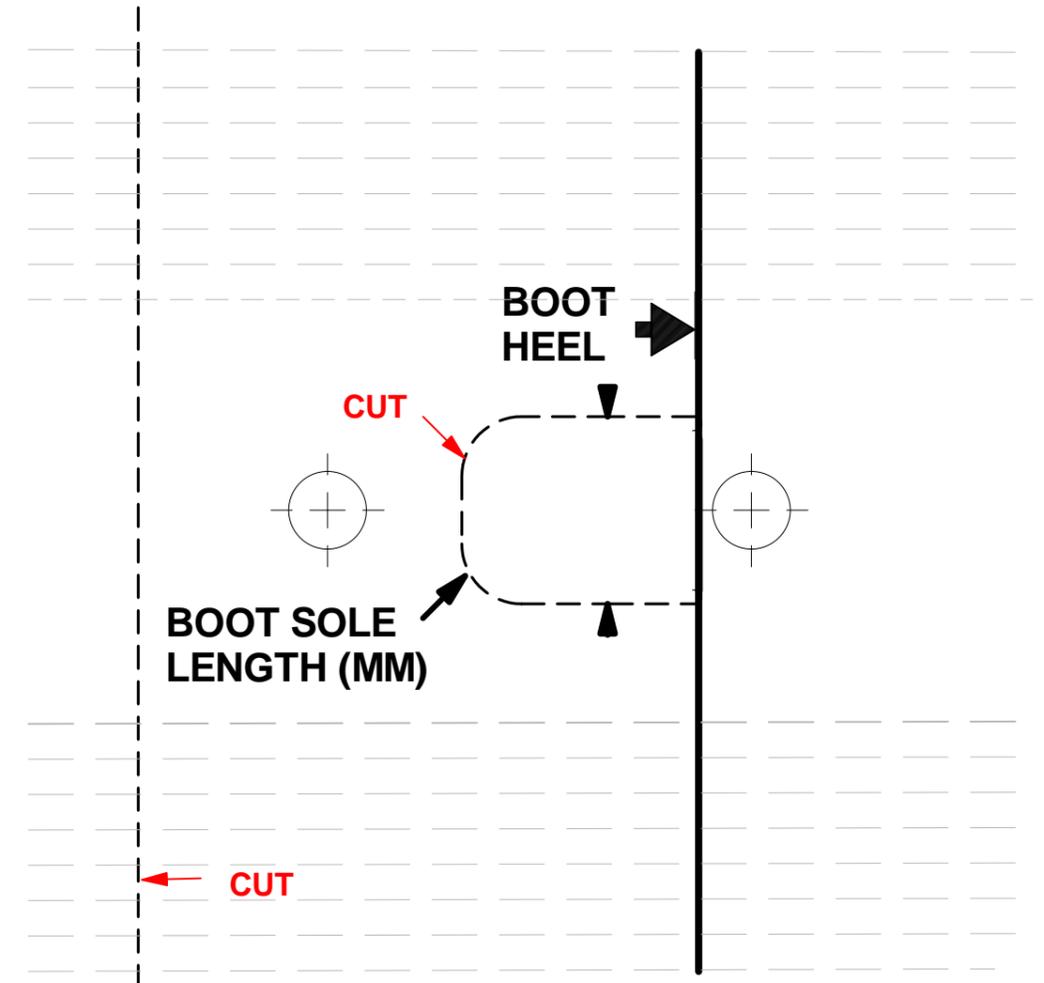

Print setup:  
Choose "None" under page scaling.  
Select properties, then A3 format